

Envisalink 4

Quick-Start Manual



Power Draw: 70mA

NOTE: For Honeywell users it is important that you create your Eyezon account and activate the module on the account before you connect it to the panel.

Important: Before installing record the 12 digit MAC ID from the sticker on the module. You will need it during activation.

Eyezon Account For Website & Mobile Access

1. Visit www.eyezon.com from any web-enabled device.
2. If you do not have an account choose Create Account and follow the instructions. You will receive a confirmation e-mail with log-in credentials.
3. Log-in to your account.
4. Click the "Add New System" from the menu.
5. Choose Envisalink 4 as the device type.
6. When prompted enter the type of panel your Envisalink is attached to.
7. When prompted enter the 12-digit MAC ID and name your device.

To Connect The Module To The Control Panel

1. Disconnect power from the panel.
2. Connect the module to the Keypad bus terminals of the panel. *Caution do not connect the module to the Tip/Ring terminals or you may damage the device.*
3. Connect an 8-conductor (not supplied) UTP cable with an RJ-45 connector to an available router, switch or hub port with a DHCP server available.
4. Restore power to the system.

NOTE: On DSC systems the Envisalink 4 automatically enrolls with the security system as a PC5400/DVACS module

Panel Programming (Only for Vista panels. Not required for DSC panels)

1. Please find the latest instructions at <https://www.eyezon.com/guides>
2. For Honeywell specifically - <https://www.eyezon.com/EyezonEnvisalinkHoneywellInstallationGuide2018.pdf>

Envisalink Local Access

1. To access the web interface on the module, from a browser on the same internal network type "envisalink" or the IP address of the module.
2. The default user name is "user" and **the default password is the last 6 digits of the MAC ID**

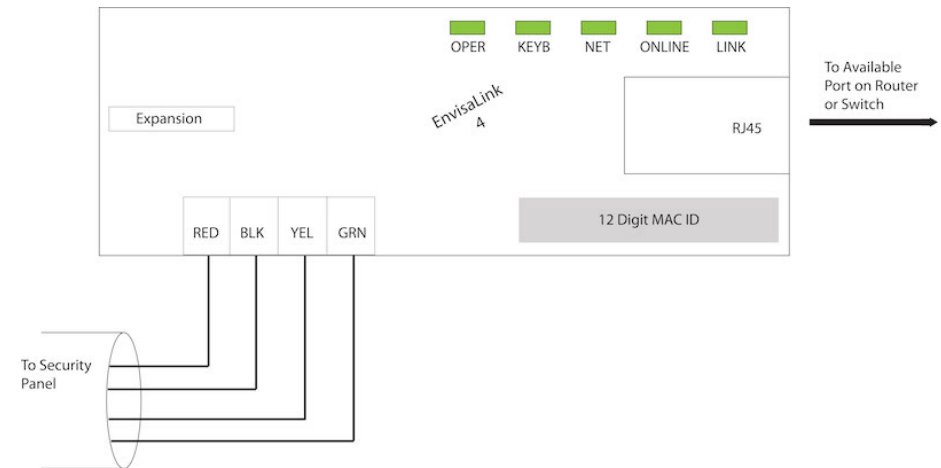


Table 1: LED Descriptions

Name	Description
OPER	SOLID GREEN - Power and functioning. OFF - Not functioning or not powered properly.
KEYB	SOLID GREEN - Panel connected correctly FLASHING - Panel not connected (DSC firmware installed) OFF - Panel not connected (Honeywell firmware installed)
NET	SOLID GREEN - IP obtained through DHCP FLASHING - Module programmed to static IP OFF - Module cannot obtain IP from DHCP server (router)
ONLINE	SOLID GREEN - Module is communicating with servers and account is properly set up. FLASHING - Module is communicating with servers but no account exists. OFF - Module is not communicating with servers.
LINK	SOLID GREEN - Ethernet link established. Will flicker with RX/TX activity. OFF - No ethernet link.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: (1) this device may not cause harmful interference and (2) this